

Code Reader™ 2600 Configuration Guide



Table of Contents

Modem Settings (for use with the Charging Station w/ Embedded CodeXML® Modem and the external CodeXML® M3 Modem when paired with a CR2600)

USB Keyboard Communication Mode - Modem - Default.....	5 (A1)
USB HID POS (Terminal 1D 131).....	5 (A2)
US English Keyboard Mapping - Leading 0 - Modem	5 (A3)
Keyboard Control Characters for Non Printable ASCII - Modem.....	5 (A4)
USB Keyboard Mode No Leading 0 - Modem - Default.....	5 (B1)
Universal Keyboard Mapping - Modem	5 (B2)
French Keyboard - Modem.....	5 (B3)
German Keyboard - Modem.....	5 (B4)
Japanese Keyboard - Modem	5 (C1)
Modem ID and Firmware Version	5 (C2)
Enable Reader Paging - Modem - Default.....	5 (C3)
Disable Reader Paging - Modem.....	5 (C4)

CR2600 Reader Settings

Communication Setting

USB Downloader Mode	5 (D1)
USB Keyboard Mode	5 (D2)
USB Virtual COM - 1 Way Mode.....	5 (D3)

Reset Setting

Reset Reader to RF Factory Defaults	5 (E1)
---	--------

Continuous Trigger Optimization and Settings

Continuous Scan On	5 (E2)
Continuous Scan Off - Default.....	5 (E3)

Symbologies

Aztec On - Default	5 (F1)
Aztec Off.....	5 (F2)
Aztec Inverse On.....	5 (F3)
Aztec Inverse & Normal.....	5 (F4)
Codabar On - Default	5 (A1)
Codabar Off.....	5 (A2)
Code 39 On - Default.....	5 (A3)
Code 39 Off	5 (A4)
Code 39 Enable Checksum.....	6 (B1)
Code 39 Disable Checksum - Default	6 (B2)
Code 39 Enable Checksum and Strip	6 (B3)
Code 39 Extended Full ASCII On.....	6 (B4)
Code 39 Extended Full ASCII Off - Default	6 (C1)
Code 93 On - Default.....	6 (C2)
Code 93 Off	6 (C3)
Code 128 On - Default	6 (D1)
Code 128 Off	6 (D2)
Data Matrix (defaulted on and can not be disabled)	
Data Matrix Rectangle (defaulted on and can not be disabled)	
Data Matrix Inverse On.....	6 (D3)
Data Matrix Inverse Off - Default.....	6 (D4)
GS1 Limited DataBar On.....	6 (E1)
GS1 DataBar 14/ Truncated 14 On	6 (E2)



Table of Contents

GS1 DataBar Stacked On	6 (E3)
GS1 DataBar Expanded On	6 (E4)
All GS1 DataBar On - Default	6 (F1)
All GS1 DataBar Off	6 (F2)
Int 2 of 5 On - Default	6 (F3)
Int 2 of 5 Off	6 (F4)
Int 2 of 5 2 and 4 Digits Off - Default	7 (A1)
Int 2 of 5 2 Digits On Only	7 (A2)
Int 2 of 5 4 Digits On Only	7 (A3)
Int 2 of 5 with Control Character Stripped	7 (A4)
PDF417 On - Default	7 (B1)
PDF417 Off	7 (B2)
QR Code On - Default	7 (B3)
QR Code Off	7 (B4)
QR Code Inverse and Standard On	7 (C1)
QR Code Inverse On	7 (C2)
UPC On - Default	7 (C3)
UPC Off	7 (C4)
UPC Expansion Enable	7 (D1)
UPC Expansion Disable - Default	7 (D2)
UPC Supplemental On	7 (D3)
UPC Supplemental Off - Default	7 (D4)

Remote Management Settings

Remote Management Enable	7 (E1)
Remote Management Disable - Default	7 (E2)

Bluetooth Settings

Bluetooth Radio Out of Range Beep - On	7 (E4)
Bluetooth Radio Out of Range Vibrate - On	7 (F1)
Bluetooth Radio Out of Range Beep and Vibrate - On	7 (F2)
Bluetooth Radio Out of Range Beep and Vibrate - Off - Default	7 (F3)
Bluetooth Radio Disconnect (Reconnect via QuickConnect Code)	7 (F4)

Image Settings

Read Both Wide and High Density Field - Default	8 (A2)
Read Wide Field Only	8 (A3)
Read High Density Field Only	8 (A4)

Operating System Settings

Enable Alternative OS (Windows CE/MAC/Linux) - Batch Mode ONLY	8 (B1)
Disable Alternative OS - Batch Mode ONLY - Default	8 (B2)

Prefix/Suffix Settings

Prefix - AIM IDs On	8 (B3)
Prefix - AIM IDs Off - Default	8 (B4)
Prefix - Comma	8 (C1)
Prefix - Space	8 (C2)
Prefix - Tab (USB Keyboard Mode ONLY)	8 (C3)
Prefix - Erase/None - Default	8 (C4)
Suffix - Comma	8 (D1)
Suffix - Space	8 (D2)
Suffix - Enter (USB Keyboard Mode ONLY)	8 (D3)
Suffix - Tab (USB Keyboard Mode ONLY)	8 (D4)



Table of Contents

Suffix - Erase/None - Default.....	8 (E1)
Erase All Prefix & Suffix Data - Default.....	8 (E2)
Miscellaneous Settings	
Reader ID and Firmware Version	8 (E4)
Reader Text Commands	
Reader Text Commands On	8 (F1)
Reader Text Commands Off - Default.....	8 (F2)
Clear Reader	
Clear All Stored Data and Images and Reboot.....	8 (F3)
Clear all JavaScript Rules	8 (F4)
Feedback Settings	
Beep Volume 0%	9 (A1)
Beep Volume 33%	9 (A2)
Beep Volume 67%	9 (A3)
Beep Volume 100% - Default	9 (A4)
Beep On Vibrate On - Default.....	9 (B1)
Beep Off Vibrate On	9 (B2)
Beep On Vibrate Off	9 (B3)
Beep Off Vibrate Off	9 (B4)
Scan Delay	
Duplicate Scan Disabled - Default.....	9 (C1)
1 sec Duplicate Scan Delay.....	9 (C2)
2 sec Duplicate Scan Delay.....	9 (C3)
3 sec Duplicate Scan Delay.....	9 (C4)
5 sec Duplicate Scan Delay.....	9 (D1)
10 sec Duplicate Scan Delay.....	9 (D2)
30 sec Duplicate Scan Delay.....	9 (D3)
1 hour Duplicate Scan Delay	9 (D4)
1 day Duplicate Scan Delay	9 (E1)
Batch Mode Settings	
Batch Mode Enable - Send and Log.....	9 (E2)
Batch Mode Disable - Default.....	9 (E3)
Batch Mode Enable - Log Only.....	9 (E4)
Targeting	
Targeting On - Default	10 (A1)
Targeting Off	10 (A2)
USB Speed	
USB Speed - High Speed (Reader in Batch Mode only) - Default	10 (B1)
USB Speed - Full Speed (Reader in Batch Mode only).....	10 (B2)
Cell Phone	
Enable Cell Phone Reading Enhancement	10 (B3)
Disable Cell Phone Reading Enhancement - Default.....	10 (B4)
Save Settings	
Save All Reader Settings.....	10 (C1)



CR2600 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

USB Keyboard Communication Mode - Modem - Default  M10189_01 A1	USB HID POS (Terminal 1D 131) - Modem  M10007_01 A2	US English Keyboard Mapping - Leading 0 - Modem  M10112_01 A3	Keyboard Control Characters for Non Printable ASCII - Modem  M10113_01 A4
USB Keyboard Mode No Leading 0 - Modem - Default  M10003_01 B1	Universal Keyboard Mapping - Modem  M10114_01 B2	French Keyboard - Modem  M10117_01 B3	German Keyboard - Modem  M10118_01 B4
Japanese Keyboard - Modem  M10119_01 C1	Modem ID and Firmware Version  M10158_01 C2	Enable Reader Paging - Modem - Default  M10155_02 C3	Disable Reader Paging - Modem  M10156_02 C4
USB Downloader Mode  M10004_01 D1	USB Keyboard Mode  M10191_01 D2	USB Virtual COM - 1 way Mode  M10192_01 D3	Intentionally Left Blank D4
Reset Reader to RF Factory Defaults  M10001_02 E1	Continuous Scan On  M10012_01 E2	Continuous Scan Off - Default  M10011_01 E3	Intentionally Left Blank E4
Aztec On - Default  M10018_01 F1	Aztec Off  M10019_01 F2	Aztec Inverse On  M10020_01 F3	Aztec Inverse & Normal  M10021_01 F4

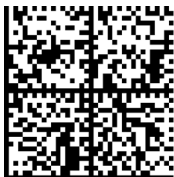
CR2600 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Codabar On - Default  M10022_01 A1	Codabar Off  M10023_01 A2	Code 39 On - Default  M10033_01 A3	Code 39 Off  M10034_01 A4
Code 39 Enable Checksum  M10036_01 B1	Code 39 Disable Checksum - Default  M10035_01 B2	Code 39 Enable Checksum and Strip  M10037_01 B3	Code 39 Extended Full ASCII On  M10039_01 B4
Code 39 Extended Full ASCII Off - Default  M10038_01 C1	Code 93 On - Default  M10042_01 C2	Code 93 Off  M10043_01 C3	Intentionally Left Blank C4
Code 128 On - Default  M10044_01 D1	Code 128 Off  M10045_01 D2	Data Matrix Inverse On  M10051_01 D3	Data Matrix Inverse Off - Default  M10050_01 D4
GS1 Limited DataBar On  M10056_01 E1	GS1 DataBar 14/Truncated 14 On  M10057_01 E2	GS1 DataBar Stacked On  M10058_01 E3	GS1 DataBar Expanded On  M10059_01 E4
All GS1 DataBar On - Default  M10054_01 F1	All GS1 DataBar Off  M10055_01 F2	Int 2 of 5 On - Default  M10060_01 F3	Int 2 of 5 Off  M10061_01 F4

CR2600 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Int 2 of 5 2 and 4 Digits Off - Default  M10062_01 A1	Int 2 of 5 2 Digits On Only  M10063_01 A2	Int 2 of 5 4 Digits On Only  M10064_01 A3	Int 2 of 5 with Control Character Stripped  M10065_01 A4
PDF417 On - Default  M10070_01 B1	PDF417 Off  M10071_01 B2	QR Code On - Default  M10095_01 B3	QR Code Off  M10096_01 B4
QR Code Inverse and Standard On  M10098_01 C1	QR Code Inverse On  M10097_01 C2	UPC On - Default  M10105_01 C3	UPC Off  M10106_01 C4
UPC Expansion Enable  M10108_01 D1	UPC Expansion Disable - Default  M10107_01 D2	UPC Supplemental On  M10110_01 D3	UPC Supplemental Off - Default  M10109_01 D4
Remote Management Enable  M10184_01 E1	Remote Management Disable - Default  M10185_01 E2	Intentionally Left Blank E3	Bluetooth Radio Out of Range Beep - On  M10173_01 E4
Bluetooth Radio Out of Range Vibrate - On  M10174_01 F1	Bluetooth Radio Out of Range Beep and Vibrate - On  M10175_01 F2	Bluetooth Radio Out of Range Beep and Vibrate Off - Default  M10176_01 F3	Bluetooth Radio Disconnect (Reconnect via QuickConnect Code)  M10177_01 F4



CR2600 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Intentionally Left Blank A1	Read Both Wide and High Density Field - Default  M10190_01 A2	Read Wide Field Only  M10182_01 A3	Read High Density Field Only  M10183_01 A4
Enable Alternative OS (Windows CE/MAC/Linux) - Batch Mode ONLY  M10123_01 B1	Disable Alternative OS - Batch Mode Only - Default  M10122_01 B2	Prefix - AIM IDs On  M10199_01 B3	Prefix - AIM IDs Off - Default  M10198_01 B4
Prefix - Comma  M10127_01 C1	Prefix - Space  M10128_01 C2	Prefix - Tab (USB Keyboard Mode ONLY)  M10129_01 C3	Prefix - Erase/None - Default  M10126_01 C4
Suffix - Comma  M10131_01 D1	Suffix - Space  M10132_01 D2	Suffix - Enter (USB Keyboard Mode ONLY)  M10134_01 D3	Suffix - Tab (USB Keyboard Mode ONLY)  M10133_01 D4
Suffix - Erase/None - Default  M10130_01 E1	Erase All Prefix & Suffix Data - Default  M10135_01 E2	Intentionally Left Blank E3	Reader ID and Firmware Version  M10157_01 E4
Reader Text Commands On  M10137_01 F1	Reader Text Commands Off - Default  M10136_01 F2	Clear All Stored Data and Images and Reboot  M10138_02 F3	Clear All JavaScript Rules  M10139_01 F4



CR2600 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Beep Volume 0%  A1	Beep Volume 33%  A2	Beep Volume 67%  A3	Beep Volume 100%  A4
Beep On Vibrate On - Default  B1	Beep Off Vibrate On  B2	Beep On Vibrate Off  B3	Beep Off Vibrate Off  B4
Duplicate Scan Disabled - Default  C1	1 sec Duplicate Scan Delay  C2	2 sec Duplicate Scan Delay  C3	3 sec Duplicate Scan Delay  C4
5 sec Duplicate Scan Delay  D1	10 sec Duplicate Scan Delay  D2	30 sec Duplicate Scan Delay  D3	1 hour Duplicate Scan Delay  D4
1 day Duplicate Scan Delay  E1	Batch Mode Enable - Send and Log  E2	Batch Mode Disable - Default  E3	Batch Mode Enable - Log Only  E4
Targeting On - Default  F1	Targeting Off  F2	Intentionally Left Blank F3	Intentionally Left Blank F4



CR2600 Configuration Guide

NOTE: The configuration change will take effect immediately and saved to memory.

Targeting On - Default  M10153_01 A1	Targeting Off  M10154_01 A2	Intentionally Left Blank A3	Intentionally Left Blank A4
USB Speed - High Speed (Reader in Batch Mode ONLY) - Default  M10160_01 B1	USB Speed - Full Speed (Reader in Batch Mode ONLY)  M10161_01 B2	Enable Cell Phone Reading Enhancement  M10163_01 B3	Disable Cell Phone Reading Enhancement - Default  M10162_01 B4
Save All Reader Settings  M10159_01 C1	Intentionally Left Blank C2	Intentionally Left Blank C3	Intentionally Left Blank C4
Intentionally Left Blank D1	Intentionally Left Blank D2	Intentionally Left Blank D3	Intentionally Left Blank D4
Intentionally Left Blank E1	Intentionally Left Blank E2	Intentionally Left Blank E3	Intentionally Left Blank E4
Intentionally Left Blank F1	Intentionally Left Blank F2	Intentionally Left Blank F3	Intentionally Left Blank F4

